


DELUXE WIRE DISPENSER OPERATING INSTRUCTIONS (H320)

COMPONENT LIST

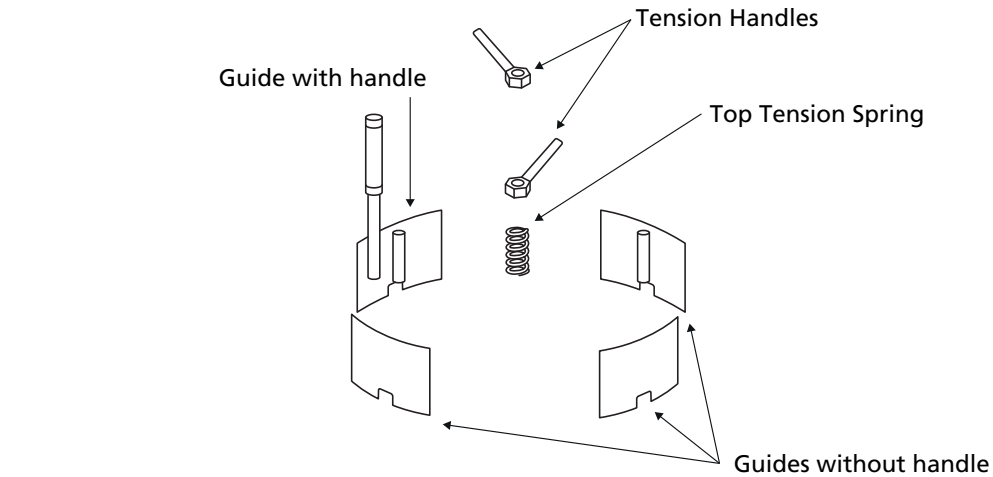


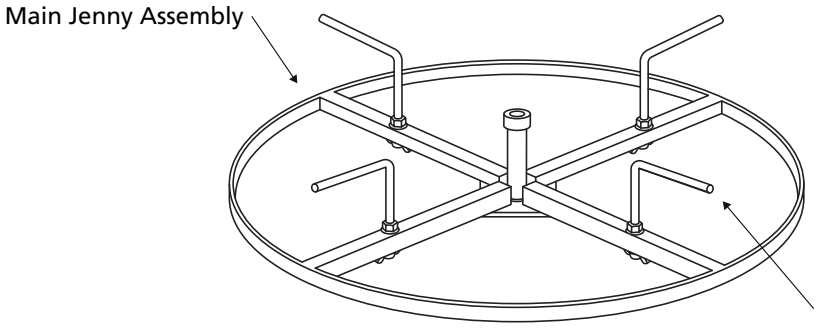

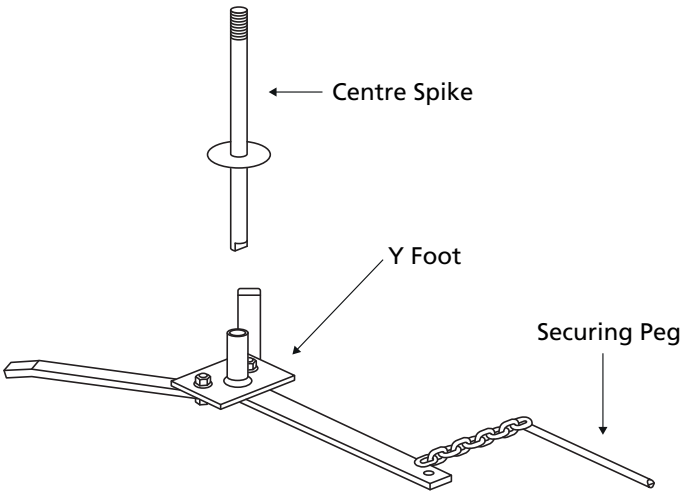


STEP ONE

- Extend the Y Foot outward to enhance stability.
- Insert the securing peg firmly into the ground for added stability.
- Place the Centre Spike into the Y Foot and ensure it is properly positioned. Ensure the threaded section is facing upward.

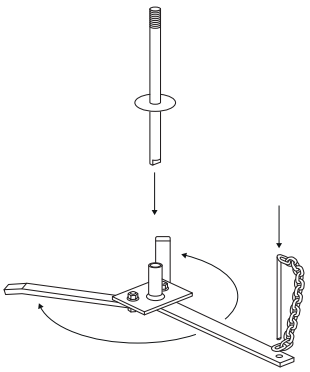


STEP TWO

- Insert the Keepers through the slots on the 3 Guide pieces without Handles and the 1 Guide piece with a Handle.
- Align the combined Keepers and Guides with the hole placements on the Dispenser arms.
- Loosely tighten the Keepers using the supplied bolts.
- Adjust the Keepers so that they are facing outward.

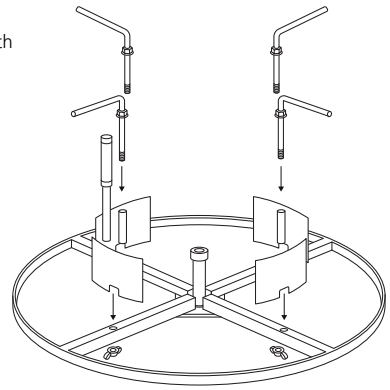


STEP THREE

- Place the coil of wire onto the Dispenser arms.
- Verify the desired winding direction of the coil before fully tightening the Keepers into a fixed position.
- Place the Main Jenny Assembly onto the centre spike.

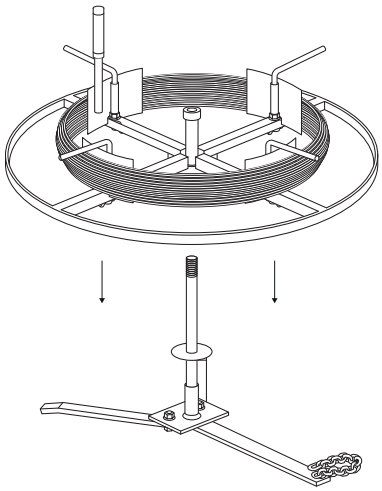


STEP FOUR

- Place the Tension Spring onto the Centre Spike.
- Lower the first Tension Handle onto the Centre Spike and tighten it to achieve the desired tension on the wheel, preventing any wire overrun.
- Fasten the second tension handle against the first handle to lock in the desired tension.

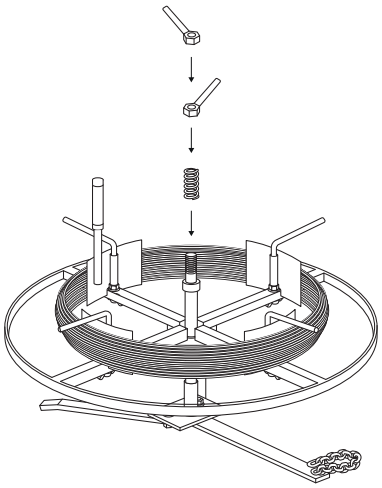

STEP FIVE

- Begin in a low position and pull the wire out toward the post you are working on. If the wire unravels too quickly increase the tension on spring (see step 4).
- If necessary, use the Guide with Handle to rewind the wire onto the dispenser.
- To add a new coil of wire, loosen one or more of the Keepers, place the coil onto the arms, and then re-tighten the Keepers.

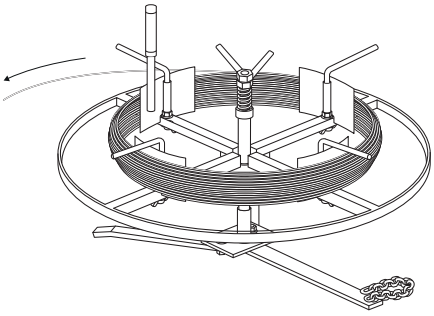

HAYES™

4290HAY02 ISSUE 1 03/25